



# PROTRACK II™ MANUAL



## PROTRACK II Manual

Every technical device can fail. So everything imaginable can happen with the PROTRACK II, including, but not limited to: displaying a status which is not true, failing to function, or functioning at a wrong moment or at a wrong occasion. If you or your friends or family are not willing to accept these uncertainties and risks, then please don't use PROTRACK II.

**PROTRACK II** is a trademark of LB ALTIMETERS, Denmark.

LB ALTIMETERS operates a policy of continuous development.

Therefore, we reserve the right to make changes and improvements to any of the products described in this guide without prior notice.



## **WARNING!**

FAILURE TO FOLLOW ALL WARNINGS, INSTRUCTIONS, AND REQUIRED PROCEDURES MAY RESULT IN SERIOUS INJURY AND DEATH.

Always ensure your PROTRACK II is adjusted to the selected DZ elevation prior to jumping to account for any changes in barometric pressure.

Audible altimeters may give erroneous warnings if you are tumbling or the altimeter is in a burble (wake), such as when sit flying.

If you are in doubt about how this limitation affects your skydiving, consult a licensed instructor.

DO NOT use this equipment unless you are currently participating in, or have successfully passed, an approved skydiving course.

The PROTRACK II is intended to be a backup device and must not be relied upon as your primary means of maintaining altitude awareness.



The device poses a risk for hearing damage due to high sound pressure (approximately 117dB) near the ears. Exposure to high-energy impulse noise can cause sudden loss of hearing. Exposure to noise is also associated with other hearing disorders such as tinnitus (perception of sound in the absence of an external source). Avoid using a higher volume setting than necessary.

Due to outside wind noise in freefall, the alarm sounds will not be perceived to be as loud as when testing the PROTRACK II on the ground.

If the PROTRACK II is not mounted correctly, you may not hear the alarm sounds. Make sure the PROTRACK II is mounted correctly before you jump.

The PROTRACK II must be active (powered ON) prior to entering the airplane.

Do not perform ACCESS less than 1 minute prior to exit.

Use the PROTRACK II at your own risk.

## CONTENTS

<b>1 - Introduction</b> .....	<b>12</b>
<b>2 - Features</b> .....	<b>14</b>
<b>3 - Description</b> .....	<b>16</b>
<b>3.1 Front</b> .....	<b>16</b>
<b>3.2 Display (Warnings section)</b> .....	<b>17</b>
<b>3.3 Display (Logbook section)</b> .....	<b>19</b>
<b>3.4 Rear</b> .....	<b>21</b>
<b>3.5 USB Connection</b> .....	<b>22</b>
<b>4 - Quick Guide and Road Map</b> .....	<b>23</b>
<b>5 - Power ON</b> .....	<b>24</b>
<b>6 - Ground Mode</b> .....	<b>26</b>
<b>7 - Flight Mode</b> .....	<b>27</b>
<b>8 - Main Windows</b> .....	<b>28</b>
<b>9- Performing ACCESS</b> .....	<b>29</b>
<b>10 - Altitude Offset</b> .....	<b>31</b>

11 - Warning Windows (common for all) .....	36	14 - Low Speed Warnings .....	54
11.1 Warning Memory Bank Description .....	37	14.1 Description.....	55
11.2 Change between Memory Banks .....	38	14.2 Setting Warnings.....	55
11.3 Setting the Warning Altitudes .....	39	14.3 Guide Tones .....	56
11.4 Four Warning Alarms .....	39	14.4 To disable Guide Tones.....	57
11.5 Three Warning Alarms .....	43	15 - LogBook .....	58
11.6 Two Warning Alarms .....	43	15.1 Logbook Screen #1. (Main information) .....	58
11.7 One Warning Alarm .....	43	15.2 Logbook Screen #2. (Date, time and dive type) .....	61
11.8 Sequence of Warning Alarm Altitudes .....	44	15.3 Logbook screen #3. (Playback, Jump profile).....	62
11.9 Sound Volume .....	45	15.4 Delete last jump.....	63
11.10 Sound Pitch.....	46	15.5 Remaining Logbook Storage.....	64
11.11 Test Warning Sounds.....	47	16- Logbook Totals .....	65
12 - Climb to Altitude Warnings.....	48	16.1 Set accumulated number of jumps.....	66
12.1 Description.....	49	16.2 Set accumulated number of hours .....	67
12.2 Setting Warnings.....	50	16.3 Set accumulated number of minutes .....	68
13 - High Speed Warnings.....	51	16.4 Set accumulated number of seconds.....	69
13.1 Description.....	52	16.5 Delete complete logbook .....	70
13.2 Setting Warnings.....	53	16.6 Remaining Logbook Storage .....	71

17 - Clock .....	72	18.5 TAS / SAS .....	89
17.1 Set Year .....	73	18.6 Feet / Meters .....	90
17.2 Set Month .....	74	18.7 MPH / KMH .....	91
17.3 Set Day .....	75	18.8 Celsius / Fahrenheit .....	92
17.4 Set 12 / 24 Hour Format .....	76	18.9 Factory Default .....	93
17.5 Set Hours .....	77	19 - Manual Zeroing .....	95
17.6 Set Minutes .....	78	20 - Landing Zone elevation differs from that of the airport .....	96
18 - Setup .....	79	21 - Prior to Jumping .....	97
18.1 Power OFF .....	81	22 - Battery Status .....	98
18.2 AUT / ECO .....	83	23 - Mounting the PROTRACK II .....	99
18.2.1 Description .....	83	24 - Resetting the PROTRACK II .....	100
18.2.2 Automatic (AUT) .....	83	25 - Battery Replacement .....	101
18.2.3 Economy (ECO) .....	84	26 - Air Filter .....	102
18.3 Beep ON / OFF .....	85	27 - Trouble-shooting .....	103
18.4 Dive Type .....	86	28 - Firmware Version / Serial Number .....	104
18.4.1 Dive Type, 3-SEC .....	87	29 - USB Mode .....	106
18.4.2 Dive Type, SLO (Slow) .....	87	30 - TAS / SAS Definitions .....	108
18.4.3 Dive Type, S-SLO (Super Slow) .....	87	30.1 TAS .....	108

30.2 SAS .....	109
30.3 Conclusion .....	109
31 - Specifications.....	111
31.1 Climb to Altitude Alarm Sounds .....	111
31.2 High-Speed Alarm Sounds.....	112
31.3 Low Speed Alarm Sounds .....	113
31.4 Alarm Output Volume .....	114
31.5 Alarm Output Pitch .....	114
31.6 Altitude Selection Interval.....	114
31.7 Setup Defaults .....	114
31.8 Logbook .....	115
31.9 Tolerances .....	116
31.10 Clock .....	116
31.11 Operating Altitude .....	116
31.12 Operating Temperature Range .....	116
31.13 Storage.....	117
31.14 USB Connector .....	117
32 - Warranty .....	118

33 - Waiver of Liability.....	119
-------------------------------	-----

## 1 - Introduction

### **Congratulations on purchasing your new PROTRACK II!**

- The PROTRACK II design is based upon the latest findings in microcomputer technology and introduces a new class of warnings for use by skydivers.
- The PROTRACK II is our most advanced instrument to date and provides added flexibility in configuring frequently used warning alarms.
- The PROTRACK II includes a powerful electronic logbook loaded with advanced features for immediate access on the large LCD display.
- The PROTRACK II is ideally suited for all types of skydives.
- The PROTRACK II includes a micro USB connector and is a Mass Storage Class (MSC) device.

Please visit [www.LBAltimeters.com](http://www.LBAltimeters.com) for applications that support PROTRACK II.

Please practice accessing the PROTRACK II and setting the warning values on the ground prior to your first jump with it.

We hope you will enjoy jumping with your new PROTRACK II.

If you have any questions please visit [www.LBAltimeters.com](http://www.LBAltimeters.com) for contact info.

LB ALTIMETERS



## 2 - Features

- **4 Climb to Altitude warnings** with settings up to 29,900 feet.
- **4 High Speed warnings** with settings up to 29,900 feet.  
Can be used for Big Way formations, wing suit setup or other events where four high speed warnings are helpful.
- **4 Canopy Descent and Low Speed warnings** with settings up to 29,900 feet.  
The Canopy Descent alerts are essentially low speed alerts, which can also be used by wingsuit flyers to keep track of altitude in preparation for separation and canopy deployment.
- **Powerful electronic logbook** packed with advanced features.  
Continuously stores detailed information about the last 200-300 jumps depending on the type of dive.

- **Micro USB port for connection** to different types of applications.  
Visit [www.LBAltimeters.com](http://www.LBAltimeters.com) for applications that support PROTRACK II.
- **Large LCD screen** for easy and intuitive operation and information review.
- **All functions fully operational at sub-zero temperatures.**
- **Always ON.** (Option: User selectable power modes).
- **Fully automatic.** It continually records the ambient air pressure and temperature and adjusts the electronic circuitry to the local elevation.
- **Thin and ergonomic design** ensures a perfect and comfortable fit to your ear when placed in a helmet.


## 3 - Description

### 3.1 Front



1. LCD Display (see Display section)
2. Up Button
3. Mode Button
4. Down Button

### 3.2 Display (Warnings section)

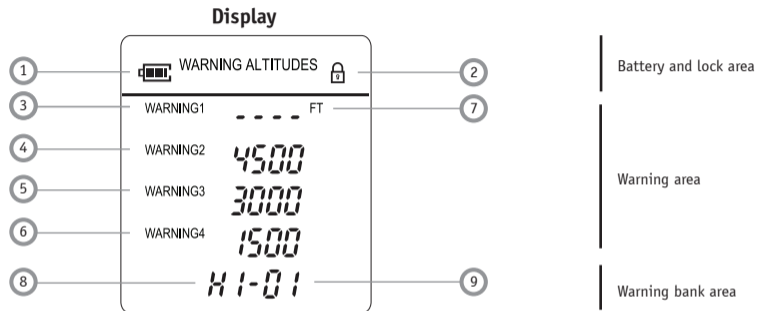

The display has the following characteristics by default (normal usage) when showing warnings:

### Battery and lock area

- 1) Battery Power Level icon – indicates the remaining battery capacity
- 2) Padlock icon displays when locked and flashes to control entrance to ACCESS mode

### Warning area:

- 3) 1st warning altitude
- 4) 2nd warning altitude
- 5) 3rd warning altitude
- 6) 4th warning altitude
- 7) Feet/Meters status


### Warning Type area:

- 8) Indicates either:
  - Climb to Altitude Warnings (CL)
  - High Speed Warnings (HI)
  - Low Speed Warnings (LO)

### Warning Bank area:

- 9) Indicates active warning bank

### 3.3 Display (Logbook section)

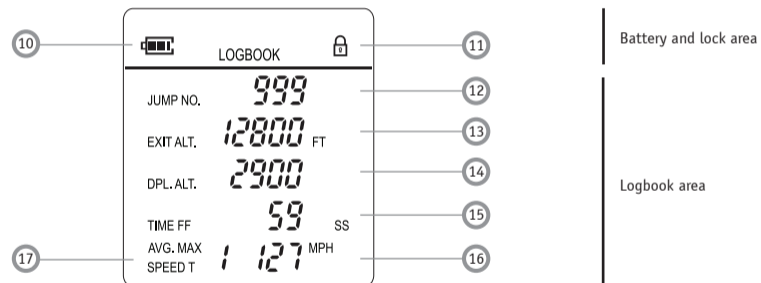

The display has the following characteristics by default (normal usage) when showing logbook information:

#### Battery and lock area:

- 10) Battery Power Level icon  
Indicates the remaining battery capacity
- 11) Padlock icon  
Displays when locked, and flashes while activating ACCESS mode

#### Logbook area:

- 12) Jump number
- 13) Exit altitude either in feet or meters
- 14) Deployment altitude in feet or meters
- 15) Freefall time
- 16) Speed information in MPH or KMH
- 17) Lists if speed is AVG or MAX

### 3.4 Rear

- 18) Battery compartment  
To replace the battery, see  
"Battery replacement" section
- 19) Reset button  
To perform reset, see  
"Resetting the PROTRACK II" section
- 20) Air Filter.  
See "Air Filter" section



### 3.5 USB Connection


- 21) Connector for data communication  
Type Micro-B USB



### 4 - Quick Guide and Road Map


It is recommended that you familiarize yourself with the PROTRACK II QUICK GUIDE and ROAD MAP, which are very helpful tools when using the PROTRACK II.

## 5 - Power ON

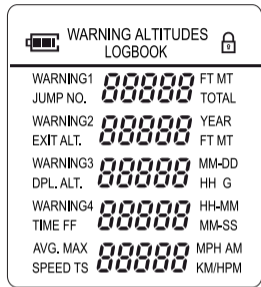

The PROTRACK II has been powered OFF prior to shipping from our factory. To turn the power ON, press and hold any key until the unit beeps, then release the key. The PROTRACK II runs a self-test and sounds two beeps as it flashes the screen two times. It then displays a “Device Info” screen.

### Device Info

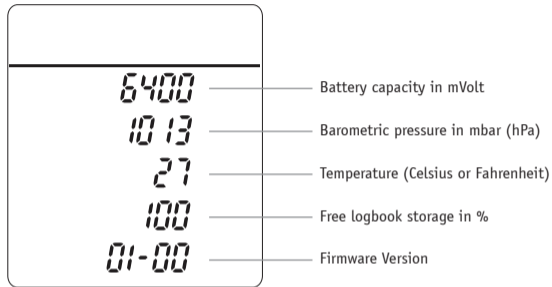

After power up, the PROTRACK II enters Ground Mode. In Ground Mode, the screen display will switch OFF after 60 seconds to save battery power. However, the unit is still ready to jump.

The PROTRACK II uses very little power and does not need to be switched OFF. However, we recommend that you switch OFF the PROTRACK II when traveling on commercial flights, when driving in mountainous areas and when the jump season is over. To power OFF the PROTRACK II, see “Power OFF” section.

## 6 - Ground Mode


After Power ON and shortly after landing from a jump the PROTRACK II enters Ground Mode.

In Ground Mode the PROTRACK II continually records the ambient air pressure and temperature and within 30 minutes calibrates itself to the local elevation.

In Ground Mode the screen display will switch OFF after 60 seconds to save battery power. However, the unit is still ready to jump.

When in Ground Mode, press any key to enter the main window.

## 7 - Flight Mode

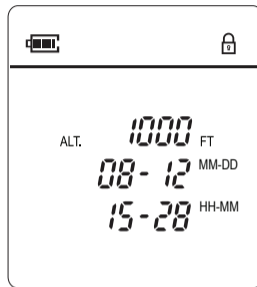

Shortly after take-off the Flight Mode window turns ON, indicating that the unit has switched to Flight Mode. This window will show current altitude, date, and time.

At the lowest "Climb to Altitude" warning the PROTRACK II sounds a sequence of beeps. See chapter 12 "Climb to Altitude Warnings" for further explanation.

## 8 - Main Windows

By pressing  or  the PROTRACK II scrolls through the main windows.

Following windows are available:




- Flight Mode
- Climb to Altitude Warnings (CL-xx)
- High Speed Warnings (HI-xx)
- Low Speed Warnings (LO-xx)
- Logbook
- Logbook Totals
- Clock
- Setup
- Firmware / Serial Number


## 9 - Performing ACCESS

**Note: Do not perform ACCESS less than 1 minute prior to exit.**


To avoid any unintentional changes in settings, all settings are “locked” behind an ACCESS procedure.

ACCESS procedure is required to change any settings in the PROTRACK II.

1. Press  and quickly release – the padlock icon turns off (disappears)
2. When the padlock icon reappears, immediately press  and keep it pressed – the padlock icon will disappear again
3. When the padlock icon appears again, immediately release 

By repeatedly pressing  the PROTRACK II scrolls through the menu functions in the selected window.




To leave a menu function, wait until the display times out, or press and hold  for 5 sec.

**NOTE:** The PROTRACK II goes out of ACCESS and back to the Main

Display if no button has been pressed within 30 sec.

All functions (except Power ON) can be performed ONLY when the PROTRACK II is in ACCESS mode.

## 10 - Altitude Offset

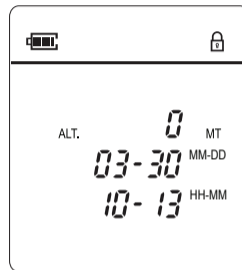



### Explanation:

If the Landing Zone (LZ) elevation is different from that of the aircraft takeoff, use the altitude offset capability to set the difference prior to entering the airplane, or set the altitude offset to zero when climbing through the LZ elevation.

**Perform ACCESS from the flight mode screen:**

The altitude (normally 0) next to the FT or MT indicator will begin to flash.



Press  or  to set an altitude offset to match the altitude of the aircraft takeoff relative to the Landing Zone.

**Examples:**

1) If the aircraft takeoff is 2000 ft. lower than the Landing Zone, the altitude offset must be set to “-2000 ft.”

If the aircraft takeoff is 1500 ft. higher than the Landing Zone, the altitude offset must be set to “1500 ft.”

2) If the PROTRACK II is switched OFF during climb to altitude. Switch the PROTRACK II ON and adjust the altitude to the same altitude as shown on the airplane altimeter (AGL).

3) When doing a B.A.S.E. Jump (> 6 sec. freefall)  
At the exit point enter the present altitude above the landing area.

4) When climbing to exit altitude in an airplane with a pressurized cabin activated. When cabin pressure has been released, program the unit to the present altitude or to a compensated altitude.

**WARNING**




Be cautious when operating the Altitude Offset.

If programmed to an altitude different from the present altitude, the pre-selected warning alarms will sound relative to the new programmed altitude.

***NOTE: DO NOT PROGRAM ALTITUDE OFFSET LESS THAN 1 MINUTE PRIOR TO EXIT.***

***NOTE: When performing manual altitude offset the PROTRACK II enters Flight Mode and stays in Flight Mode for 14 hours, if no jump is made. After 14 hours the PROTRACK II recalibrates to the field elevation where it is currently located and enters Ground Mode. The altitude offset is not retained when the PROTRACK II is powered OFF.***

## 11 - Warning Windows (common for all)

 WARNING ALTITUDES	 WARNING ALTITUDES	 WARNING ALTITUDES
WARNING1    - - - FT	WARNING1    - - - FT	WARNING1    - - - FT
WARNING2    - - -	WARNING2    4500	WARNING2    1200
WARNING3    - - -	WARNING3    3000	WARNING3    900
WARNING4    1000	WARNING4    1500	WARNING4    600
CL-01	HI-01	LO-01

The following options are available after performing ACCESS in “Climb to Altitude (CL)”, “High Speed (HI)” or “Low Speed (LO)” windows.

- Select Warning Memory Bank
- Set or disable warnings
- Enable / Disable Guide Tones (only for Low Speed warnings)

- Set volume
- Set pitch
- Hear selected warnings, volume and pitch

### 11.1 Warning Memory Bank Description



The PROTRACK II makes it possible to store warning altitudes in four custom “Warning Memory Banks”. This is a useful option when performing various types of jumps, e.g., Freely, AFF, Tandem, Camera, etc.

In the Warning Bank area, a number indicates which Warning Memory Bank the warning altitudes are stored in.

**NOTE: The PROTRACK II will sound at the selected altitudes that were displayed last on the LCD.**

## 11.2 Change between warning Memory Banks




When the warning bank value is flashing, press  or  to select warning bank -01 to -04.

## 11.3 Setting the Warning Altitudes

The setting of altitudes in each warning bank can be performed either on the ground or in the airplane during climb to jump altitude.


## 11.4 Four Warning Alarms

Press  until 1<sup>st</sup> warning altitude flashes

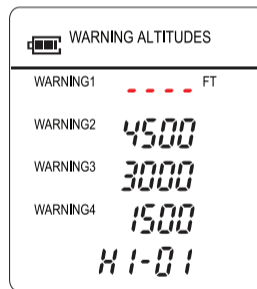


Press  or  to change the 1<sup>st</sup> warning altitude

Press  again and the 2<sup>nd</sup> warning altitude flashes

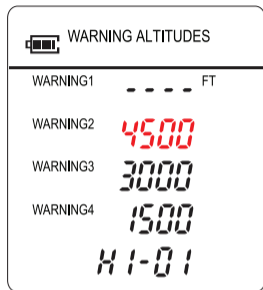

Press  or  to change the 2<sup>nd</sup> warning altitude

Press  again and the 3<sup>rd</sup> warning altitude flashes



Press  or  to change the 3<sup>rd</sup> warning altitude

Press  again and the 4<sup>th</sup> warning altitude flashes



Press  or  to change the 4<sup>th</sup> warning altitude

### 11.5 Three Warning Alarms

You can choose to only have three warning alarms. The procedure is the same as above, but set one of the warnings to ----- (Zero)

**NOTE:** (The PROTRACK II then sounds only the 2<sup>nd</sup>, 3<sup>rd</sup> and 4<sup>th</sup> warning alarms).

### 11.6 Two Warning Alarms

You can choose to only have two warning alarms. The procedure is the same as above, but set two of the warnings to ----- (Zero)

**NOTE:** (The PROTRACK II then sounds only the 3<sup>rd</sup> and 4<sup>th</sup> warning alarms).

### 11.7 One Warning Alarm


If you want only one warning alarm, set three of the warnings to ----- (Zero)


**NOTE:** (The PROTRACK II then sounds only the 4<sup>th</sup> warning alarm).

### 11.8 Sequence of Warning Alarm Altitudes

Please note that when setting the warning altitudes, it is possible to set the 1st warning alarm altitude lower than the 2nd, or even the 4th, warning altitudes. The 2nd warning altitude could be set to a higher value than the 1st warning altitude, or a lower value than the 3rd warning altitude, and so on. This is not a problem; when the PROTRACK II exits ACCESS mode it will automatically sort and store the warning alarms, such that the highest warning altitude becomes the 1st warning alarm, the next highest warning altitude becomes the 2nd warning alarm, and the lowest warning altitude becomes the 4th warning alarm.

### 11.9 Sound Volume

Press  again to set sound volume.

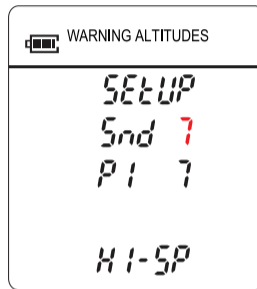

Output volume for all four warnings will begin to flash


Press  or  to change volume


"1" is very low volume (112 dB), "9" is very high volume (117 dB)

**NOTE: In case of low battery capacity the volume will automatically switch to "1" and it cannot be changed until the batteries have been replaced.**



### 11.10 Sound Pitch

Press  again to set sound pitch.

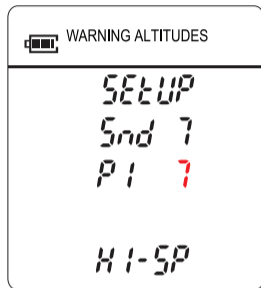

Output pitch for all four warnings will begin to flash


Press  or  to change pitch.

"1" is very low pitch, "9" is very high pitch.

**NOTE:** When selecting a pitch on either side of 7 (3,800 Hz), the output volume will decrease about 5 dB because the speaker is no longer at its optimum resonance frequency.




### 11.11 Test Warning Sounds

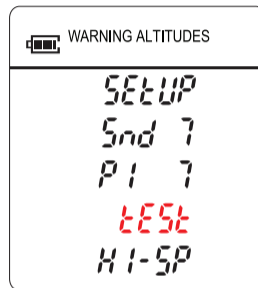Press  again to test warning sounds.




"Test" will begin to flash.

Press  or .

This causes the PROTRACK II to sound the preset alarm sequence at the selected pitch and volume. To stop the Test Warning Sounds, press ,  or .

## 12 - Climb to Altitude Warnings

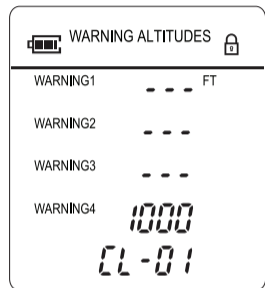

### The window shows:

- Warning1
- Warning2
- Warning3
- Warning4
- Active memory bank

**NOTE: Factory preset values for Climb to Altitude Warnings:**

*--- ft., --- ft., --- ft. and 1000 ft*

### 12.1 Description

The PROTRACK II includes 4 “Climb to Altitude Warnings” memory banks (CL-01 to CL-04).

Up to 4 different altitudes during climb may be set in each bank.

In Flight Mode, when passing through the lowest preset climb altitude (factory preset to 1,000 feet), the PROTRACK II sounds a sequence of beeps. These beeps have two functions:

1. The beeps indicate that the PROTRACK II has calibrated itself correctly to the local ground elevation and is ready to jump.
2. The number of beeps indicates the altitude at which the highest warning alarm is set. Example: If set to 4,500 feet, the signal will sound: beep-beep-beep-beep (pause) beep.

The number of rapid-sequence beeps indicates the “high speed” warning altitude in thousands of feet. The beep after a pause (if any), signifies a 500-foot altitude

increment.

Should the battery voltage show low capacity, the sequence will be followed by an additional 5 short beeps.


**Note:** *At the same time the output volume setting is automatically changed to low volume "1" and it cannot be changed until the batteries have been replaced.*

## 12.2 Setting Warnings

The setting of warning altitudes can be performed either on the ground or in the airplane during climb to jump altitude.

For settings, please read "Warning Windows (common for all)".

## 13 - High Speed Warnings

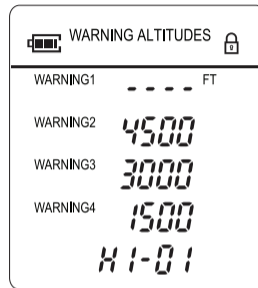

**The window shows:**

- Warning1
- Warning2
- Warning3
- Warning4
- Active Memory Bank

**NOTE:** *Factory preset values for High Speed Warnings: --- ft., 4500 ft., 3000 ft., 1500 ft.*

### 13.1 Description

The PROTRACK II includes 4 “High Speed Warnings” memory banks (HI-01 to HI-04).

Up to 4 different warning altitudes may be set in each memory bank.

#### 1<sup>st</sup> warning:

One 1.5 second pulsating alarm if vertical airspeed exceeds 13 m/sec at preset altitude. Sound sequence: Pulsating, low repetition.

#### 2<sup>nd</sup> warning:

One 3 second pulsating alarm if vertical airspeed exceeds 13 m/sec at preset altitude. Sound sequence: Pulsating, low repetition.

#### 3<sup>rd</sup> warning:

One 4 second pulsating alarm if vertical airspeed exceeds 13 m/sec at preset altitude. Sound sequence: Pulsating, high repetition.

#### 4<sup>th</sup> warning:

Siren alarm as long as vertical airspeed exceeds 13 m/sec at or below the preset altitude.

After deployment the trigger speed switches to 35 m/sec.

Sound sequence: High pitch continuous siren.


### 13.2 Setting Warnings

The setting of warning altitudes can be performed either on the ground or in the airplane during climb to jump altitude.

For settings, please read “Warning Windows (common for all)”.

***Minimum selectable altitude is 0 ft (0 meters)***

## 14 - Low Speed Warnings

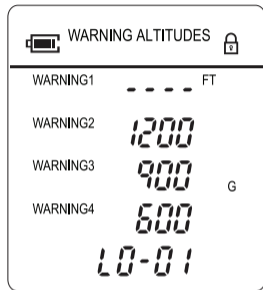

### The window shows:

- Warning 1
- Warning 2
- Warning 3
- Warning 4
- Active bank
- A small G icon is ON, if Guide Tones are activated.

**NOTE: Factory preset values for Low Speed Warnings:**  
--- ft., 1200 ft., 900 ft., 600 ft. and Guide = OFF.

### 14.1 Description

The PROTRACK II includes 4 “Low Speed Warnings” memory banks (LO-01 to LO-04).

Up to 4 different warning altitudes may be set in each memory bank.

Short beeps sound when passing through one, two, three or four altitudes.

1<sup>st</sup> warning: One 0.2 second beep

2<sup>st</sup> warning: One 0.2 second beep

3<sup>rd</sup> warning: Two 0.2 second beep


4<sup>th</sup> warning: One 1.3 second beep

### 14.2 Setting Warnings


The setting of warning altitudes can be performed either on the ground or in the airplane during climb to jump altitude.

For settings, please read “Warning Windows (common for all)”.

### 14.3 Guide Tones

Press  again to select Guide Tones

WARNING ALTITUDES		WARNING ALTITUDES	
WARNING1	--- FT	--- FT	
WARNING2	1200	1200	
WARNING3	900	900	G
WARNING4	300	300	
	On	OFF	

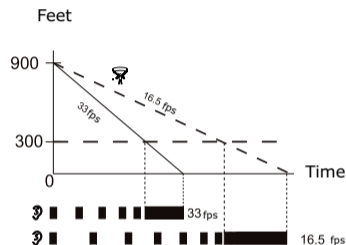

When Guide Tones are activated, a unique series of beeps sound between the 3<sup>rd</sup> and 4<sup>th</sup> Low Speed Warnings.

The first beep sounds when passing through the 3<sup>rd</sup> warning altitude, the next beep 30% into the glide corridor, then after 55% and so on as depicted in the diagram.

The diagram shows an example where the 3<sup>rd</sup> warning is set to 900 ft and the 4<sup>th</sup> warning to 300 ft. A long beep sounds when passing through the 4<sup>th</sup> selected altitude. The steeper a glide angle the shorter time between beeps.


Press  to set the GUIDE ON.

When Guide Tones are enabled, the G icon will be displayed in the Low Speed Warning window next to warning 3.

### 14.4 To disable Guide Tones

Press  to set the GUIDE OFF.

## 15 - LogBook

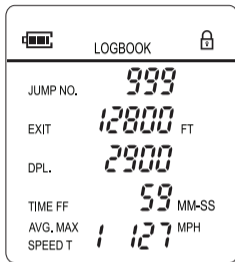

### 15.1 Logbook Screen #1. (Main information)

#### The window shows:

- Jump number
- Exit altitude
- Deployment altitude
- Freefall time
- Speeds (scrolls automatically through AVG, MAX, 1<sup>st</sup> and 2<sup>nd</sup> half)

Minimum freefall time for logbook generation in normal mode is around 8 seconds.

Minimum freefall time for logbook generation in Dive Type = "3-Sec mode" is around 3 seconds.

The PROTRACK II can display terminal speed information four different ways in mph and km/h:

1. Max speed
2. Average speed
3. Average speed during the first half of the freefall
4. Average speed during the second half of the freefall

All speeds are calculated from 15 sec after exit to 7 sec before deployment.

If the freefall lasted between 20 and 30 sec. the display only shows:

- Average speed
- Max speed

If the freefall lasted more than 30 sec. the display shows:

- Average speed
- Max. speed
- Avg. 1<sup>st</sup> half
- Avg. 2<sup>nd</sup> half

**NOTE: If the freefall lasted less than 20 sec. the display shows no speed information.**

Perform ACCESS to scroll through the previous jumps.

	LOGBOOK	LOGBOOK	LOGBOOK
JUMP NO.	999	998	997
EXIT	12800 FT	12700 FT	12600 FT
DPL.	2900	2800	2700
TIME FF	59 MM-SS	58 MM-SS	57 MM-SS
AVG. MAX SPEED T	1 127 MPH	1 127 MPH	1 127 MPH

After performing ACCESS, press  or  to scroll through any previous jump



## 15.2 Logbook Screen #2. (Date, time and dive type)

Press  to view Logbook Screen # 2.

	LOGBOOK	LOGBOOK	LOGBOOK
JUMP NO.	999	998	997
	20 13 YEAR	20 13 YEAR	20 13 YEAR
	8- 12 MM-DD	8- 12 MM-DD	8- 12 MM-DD
TIME	15-22 HH-MM	14-22 HH-MM	13-22 HH-MM
	-----	-----	-----

### The window shows:

- Jump number
- Year
- Month and date
- Hours and minutes
- Dive Type

Press  or  to scroll through any previous jump.




### 15.3 Logbook screen #3. (Playback, Jump profile)

Press  to view Logbook Screen #3.

The Profile area features playback of altitude/speed profile for the jump.

**Note:** Speed information is available in playback mode when freefall has lasted > 6 sec.

 LOGBOOK	LOGBOOK	LOGBOOK
JUMP NO. 999	999	999
ALT. 12800 FT	12700 FT	12600 FT
TIME 56-00 SS	57-00 SS	58-00 SS
SPEED T 127 MPH	128 MPH	129 MPH

**The windows shows:**

- Jump number
- Altitude at time
- Freefall or canopy indicator
- Time after exit in seconds
- Speed at time


Press and hold  to scroll up in jump profile




Press and hold  to scroll down in jump profile

**NOTE:** For safety reasons, playback is disabled when in Flight Mode

### 15.4 Delete last jump

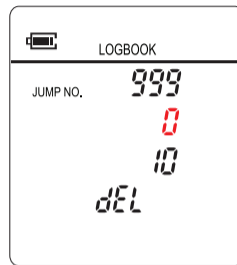Press  to view "Delete last Jump" window.




Press  or  to increase / decrease the flash counter to 10. At "10" press  2 beeps will sound when the unit has deleted the last jump. At the same time the accumulated number of jumps and freefall time are updated.

**Caution:** When the last jump has been erased, there is no way to restore the original information.

## 15.5 Remaining Logbook Storage

Press  to view the “Remaining Logbook Storage” window.

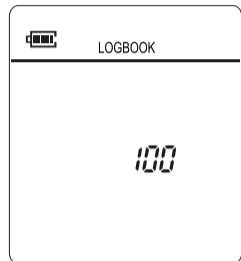


Free logbook storage in %

The PROTRACK II flash memory can store 2 MB of data (approximately 200 jumps with two minute profiles or 26 jumps with 15 minute profiles).

When the storage is full (0% free), the PROTRACK II will overwrite the lowest jump number in memory.

## 16- Logbook Totals

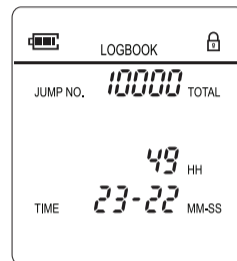

**The options in this window are:**

- Set accumulated number of jumps
- Set accumulated hours
- Set accumulated minutes
- Set accumulated seconds
- Delete logbook
- Remaining logbook storage

It is recommended that you update the PROTRACK II logbook (accumulated number of jumps and freefall time) before making the first jump with the unit.



**NOTE: Factory preset values for Logbook Totals:**

**0 jumps, 0 hours, 0 minutes and 0 seconds.**

## 16.1 Set accumulated number of jumps

Perform ACCESS to change settings.



Press  or  to set the accumulated number of jumps.

## 16.2 Set accumulated number of hours


Press  and accumulated hours of freefall flashes.



Press  or  to set the accumulated hours of freefall.

### 16.3 Set accumulated number of minutes


Press  and accumulated minutes flashes.

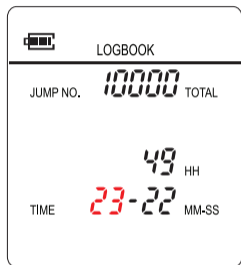

Press  or  to set the accumulated minutes of freefall.

### 16.4 Set accumulated number of seconds


Press  and accumulated seconds flashes.

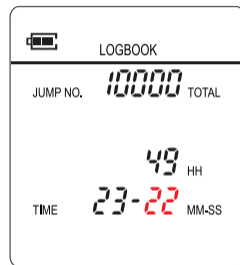

Press  or  to set the accumulated seconds of freefall.

## 16.5 Delete complete logbook

Press  and counter flashes.

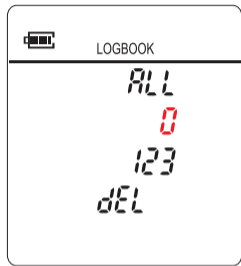

Press  or  to increase or decrease the flashing counter to 123.

When flashing counter shows 123, press .


2 beeps will sound when the unit has deleted the logbook.

At the same time the accumulated number of jumps and freefall time are set to 0.

**Caution:** Once the PROTRACK II has beeped there is no way to restore the information.

## 16.6 Remaining Logbook Storage

Press  to view the "Remaining Logbook Storage" window.

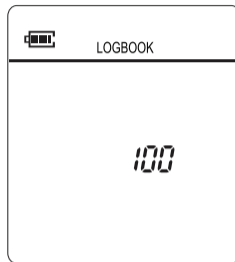


Free logbook storage in %

The PROTRACK II flash memory can store 2 MB of data (approximately 200 jumps with two minute profiles or 26 jumps with 15 minute profiles).

When the storage is full (0% free), the PROTRACK II will overwrite the lowest jump number in memory.

## 17 - Clock

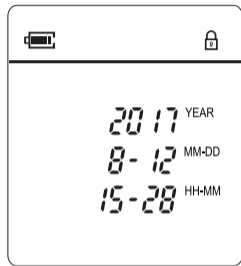

### The options in this window are:

- Set year
- Set month
- Set day
- Set 12 / 24 hour format
- Set hours
- Set minutes


**NOTE: Factory preset values for Clock:**

**Date: 2013-01-01. Time: 12-00-00. 24 hour format.**

### 17.1 Set Year

Perform ACCESS to change settings.


Year will flash.

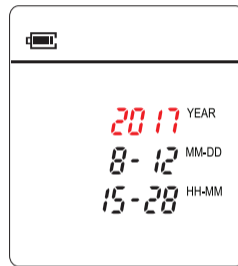

Press  or  to set year.

## 17.2 Set Month


Press  and month flashes.

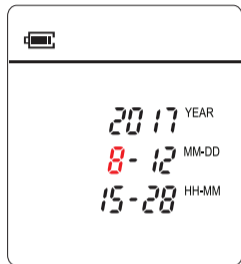

Press  or  to set month.


## 17.3 Set Day


Press  and day flashes.

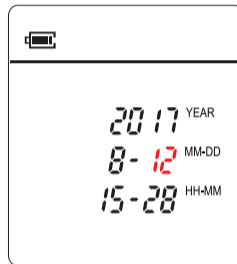

Press  or  to set day.


#### 17.4 Set 12 / 24 Hour Format


Press  and 24 or 12 hour format flashes.

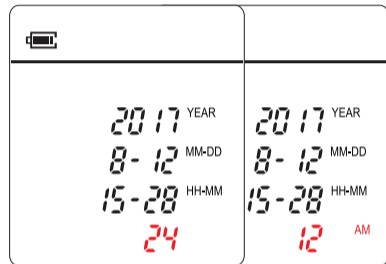

Press  or  to select 24 hour or 12 hour Format.

#### 17.5 Set Hours

Press  and hours flashes.

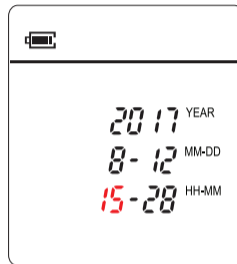


Press  or  to set hours.



## 17.6 Set Minutes

Press  and minutes flashes.

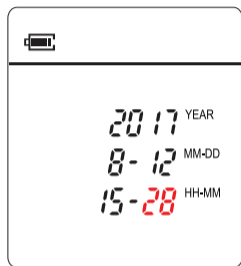


Press  or  to set minutes.

**NOTE:** Clock setting is not kept in memory when replacing batteries.

## 18 - Setup

The PROTRACK II can be customized to your personal settings. Your settings will be stored and recalled also after replacing batteries. When you first get the PROTRACK II, we recommend you to go through the SETUP Selector to customize the PROTRACK II settings.

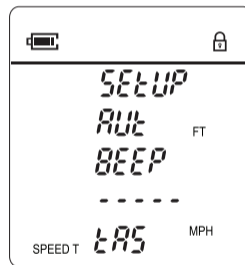

In the Setup area the following options can be selected:


- Power OFF
- AUT / ECO (Default ECO)
- Beep ON / OFF (Default ON)
- Dive Type (Default None)
- TAS / SAS (Default TAS)
- Feet / Meters (Default Feet)
- MPH / KM/H (Default MPH / KM/H)
- Celsius / Fahrenheit (Default Celsius / Fahrenheit)
- Reset to Factory Default




Perform ACCESS to change settings.

### 18.1 Power OFF

The PROTRACK II can be manually powered OFF to further extend the battery life time when not in use.

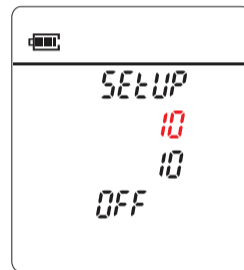Press  again and counter flashes.



Press  or  to increase / decrease the flash counter to 10. At 10 press .

The PROTRACK II switches OFF.

We recommend that you switch OFF the PROTRACK II when traveling on commercial flights, when driving in mountainous areas, and when the jump season is over.


**NOTE:** *Customer settings (except altitude offset) are stored in nonvolatile memory when the PROTRACK II is powered OFF.*

**When powered OFF, the PROTRACK II cannot be used for jumping.**

To power the PROTRACK II ON, press any key until the unit beeps, then release the key. The unit calibrates itself to the local elevation.

## 18.2 AUT / ECO

Press  again and AUT/ECO flashes.

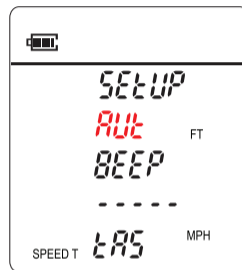

Press  or  to toggle between AUT/ECO.

### 18.2.1 Description

The PROTRACK II can be operated in two power modes: Automatic and Economy.

### 18.2.2 Automatic (AUT)

In AUT mode the unit is active all the time and continually records the ambient air

pressure and temperature.

Use this mode when jumping frequently. In AUT the battery life time is around 2 years or 300 jumps.

### 18.2.3 Economy (ECO)

When set to ECO the PROTRACK II operates in a semi-automatic mode.


It continuously records the ambient air pressure and temperature, but switches OFF 14 hours after the last jump or 14 hours after the last pressing of any button, whichever comes last.

This is a battery saving mode and is used when jumping is mostly done in the week-ends.

**NOTE: The PROTRACK II does not switch OFF while in Flight Mode (see section Flight Mode).**

### 18.3 Beep ON / OFF

Press  again and BEEP ON/OFF flashes.

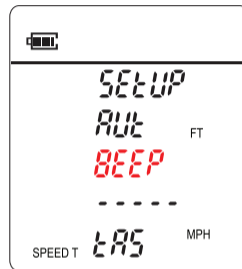


Press  or  to toggle between BEEP ON/OFF.



This only affects the beeps when pressing buttons, and will not turn off warning beeps.

## 18.4 Dive Type

The Dive Type mode can be used to change the parameters when the PROTRACK II detects freefall exit and canopy deployment.

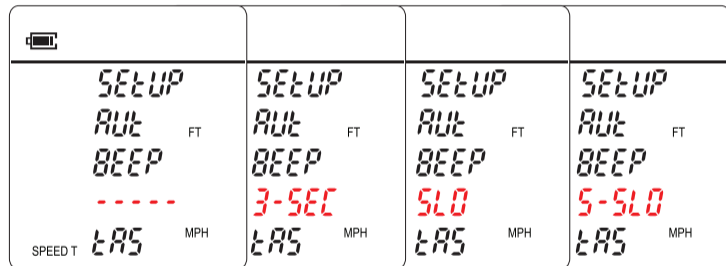Press  again and Dive Type flashes.



Press  or  to select Dive Type.

Changing Dive Type from "----" (Normal) to any other mode will change the PROTRACK II sensitivity.

### 18.4.1 Dive Type, 3-SEC

In 3-SEC mode the descent rate parameters are more sensitive, allowing detection of short freefalls (around 3 sec. freefall) for logbook exit altitude generation.

See note 1 and 2.

### 18.4.2 Dive Type, SLO (Slow)

In SLO mode the deployment calculation parameters are more sensitive. Supports slow falling types of dives, like normal wing suits dives etc.

See note 1 and 2.

### 18.4.3 Dive Type, S-SLO (Super Slow)

In S-SLO the exit and deployment calculation parameters are more sensitive.

This mode is for very slow wing suit dives, fast canopy descents, Extreme Relative Work (XRW) etc.

All high speed warnings are enabled regardless of the vertical airspeed at the preset altitudes.

See note 1.

**NOTE 1:**

*Freefall detection is very sensitive in this mode and may log a jump if the airplane descends.*

*Exit and deployment altitudes may be incorrect.*

*Freefall time may be incorrect.*

**NOTE 2:**


*High speed warnings 1, 2 and 3 sound when vertical airspeed exceeds 13 m/sec at the preset altitude.*

*High Speed warning 4 sounds when vertical airspeed exceeds 13 m/sec at or below the preset altitude.*

*After deployment, warning 4 trigger speed switches to 35 m/sec.*

### 18.5 TAS / SAS

Press  again and TAS/SAS flashes.

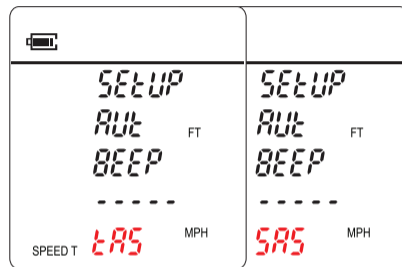

Press  or  to switch between TAS and SAS.


**Definitions:**

**True Airspeed (TAS)** and **Skydiver's Airspeed (SAS)** are two methods of calculating the airspeed of a falling object.

See section 30 "TAS / SAS Definitions" for more information about TAS and SAS.

## 18.6 Feet / Meters

Press  again and FT or MT flashes.

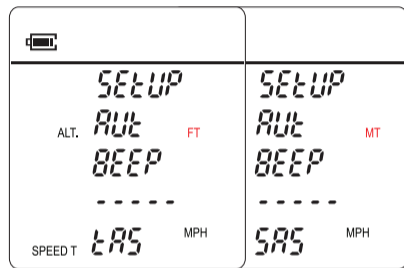




Press  or  to switch between feet (FT) or meters (MT).

**NOTE:** Jump data is continuously stored in both feet and meters. At any time stored information may be displayed in either unit of measurement by selecting the respective mode.

## 18.7 MPH / KM/H

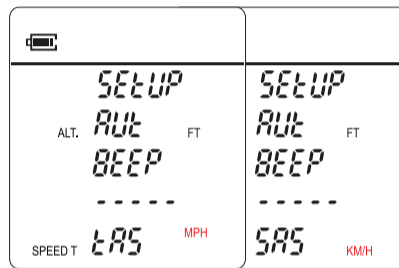Press  again and MPH/KMH flashes.



Press  or  to switch between miles per hour (MPH) or kilometer per hour (KM/H).

**NOTE:** Jump data is continuously stored in both MPH and KM/H. At any time stored information may be displayed in either unit of measurement by selecting the respective mode.

### 18.8 Celsius / Fahrenheit


Press  again and CEL/FAHr flashes.




Press  or  to switch between Celsius(CEL) and Fahrenheit(FAHr).

### 18.9 Factory Default

Press  again and Counter flashes.

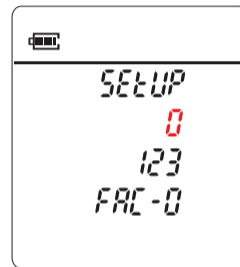

Press  or  to increase / decrease the flash counter to 123.

At 123 press .



The PROTRACK II does the following:

- Deletes all information in the logbook
- Accumulated number of jumps and freefall time is reset to 0
- All warnings are reset to factory preset values
- Clock is reset to default

***Caution: There is no way to restore the information.***

## 19 - Manual Zeroing

When arriving at the Drop Zone the PROTRACK II may be in Flight Mode. (see section Flight Mode).

In this case it is necessary to manually zero the unit before jumping, as follows:

Switch OFF the PROTRACK II and turn it ON again.

The PROTRACK II will calibrate itself to the local elevation.

## 20 - Landing Zone elevation differs from that of the airport

- 1: Perform Manual Zeroing in the airplane at Landing Zone elevation,  
or
- 2: Compensate by adjusting the warning altitudes accordingly,  
or
- 3: Program new altitude Offset.





See section 10

## 21 - Prior to Jumping

When powered ON, the PROTRACK II continually adjusts to the local elevation. Prior to jumping the PROTRACK II should be in Ground Mode.

If the PROTRACK II is in Flight Mode and does not show the correct altitude (or your selected altitude offset) it must be manually zeroed, as follows:  
Switch OFF the PROTRACK II and turn it ON again.  
The PROTRACK II will calibrate itself to the local elevation.

## 22 - Battery Status

-  Full capacity: Symbol shows two black bars inside the battery icon.
-  Half capacity: Symbol shows one black bar inside the battery icon.
-  Low capacity: Symbol shows no black bars, just an “empty” battery icon.  
Batteries should be replaced as soon as possible.  
As a reminder, 5 short beeps sound when climbing through the lowest preset climb altitude.
-  Empty battery: The battery icon flashes. Replace batteries immediately.

## 23 - Mounting the PROTRACK II

***NOTE: Make sure that there is no material between the PROTRACK II loudspeaker hole and your ear.***

## 24 - Resetting the PROTRACK II



Press a paperclip into the tiny hole on the left side of the battery cover and release. The unit restarts.

**NOTE:** Reset the unit after battery replacement or when troubleshooting.


## 25 - Battery Replacement



Carefully remove screws from battery cover and remove batteries.

Install new batteries and note polarity. Use only Renata CR-2325.

Do not over-torque the screws



**NOTE:** Reset the PROTRACK II after replacing batteries.

*Customer settings are kept in non-volatile memory when removing batteries.*

*However, the built-in clock must be set to the correct time.*


## 26 - Air Filter

The PROTRACK II is water resistant against minor splashes of water.

The air filter is the white circular part mounted on the back of the unit below the battery cover. If it becomes wet, let the PROTRACK II dry in a warm place for 48 hours.

**NOTE:** *The air filter must be replaced if jumping is resumed quickly or if the PROTRACK II has been submerged into water.*

## 27 - Troubleshooting

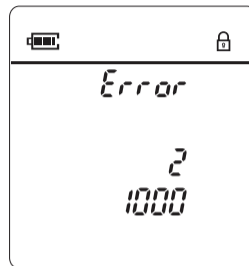


When the PROTRACK II detects a fault, an error (“Error”) sign, number and code are displayed.

All faults indicate that the PROTRACK II is defective.

Remedy: Replace batteries or press reset.

If the unit does not function correctly even after replacing batteries and pressing reset, please contact your local dealer or LB ALTIMETERS.

## 28 - Firmware Version / Serial Number

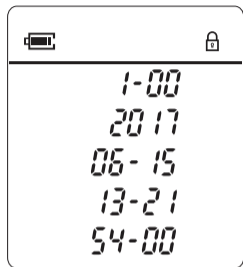

Each PROTRACK II is programmed with a unique serial number.

Display example:

Firmware version: 1.00

Serial number: 2017-06-15-13-21-54-00

To read the number:


While in the Setup window, press  and keep pressed for minimum 5 seconds.

The PROTRACK II will display the firmware version on line 1 and the serial number on the following lines.

It is recommended that you write down the serial number for later reference in case you need to contact LB ALTIMETERS, your dealer or your insurance company.

Serial number:							
Purchased at:							
Date:							

## 29 - USB Mode

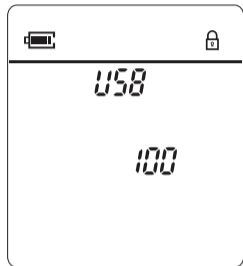

### Free logbook storage in %

The PROTRACK II is a USB Mass Storage Class (MSC) device.

If a USB host device is connected to the PROTRACK II USB port, the PROTRACK II will act as a USB slave and show USB on the LCD display.

The PROTRACK II flash memory can store 2 MB of data (approximate. 200 jumps with two minute profiles or 26 jumps with 15 minute profiles).

When the storage is full (0% free), the PROTRACK II will overwrite the lowest jump number in memory.

Please visit [www.LBAltimeters.com](http://www.LBAltimeters.com) for applications that support PROTRACK II.

***NOTE: Do not leave the PROTRACK II connected to the PC / Mac unless accessing the unit. Otherwise the PROTRACK II batteries will lose power very fast.***

## 30 - TAS / SAS Definitions

True Airspeed (TAS) and Skydiver's Airspeed (SAS) are two methods of calculating the airspeed of a moving/flying/falling object. SAS is a concept developed by LB ALTIMETERS:

**TAS is:** The speed of an object relative to the surrounding air regardless of the altitude, a term used in aviation.

**SAS is:** The speed of a skydiver calculated as if the complete skydive had been performed at 4,000 feet MSL.

### 30.1 TAS

A skydiver's TAS changes as a function of the altitude (air pressure) and temperature, which makes it difficult to compare fall rates.

**Example:** A skydiver (in a fixed freefall position) who has a terminal fall rate of 62 meters/sec at 10,000 feet will have a terminal fall rate of 50 meters/sec at 3,000 feet. It will be seen that the difference in altitude (and thereby air pressure) makes it

difficult to compare the fall rates when measured using TAS.

### 30.2 SAS

The SAS formula calculates airspeed (using the same metrics used with TAS) from measurements of air pressure and temperature and converted to a fixed air pressure (875.3 mb) and a fixed temperature (+7.080C) which corresponds to 4,000 feet MSL. 4,000 feet is chosen as the reference altitude by LB ALTIMETERS since this is the average altitude at which the working time of a skydive is normally ended.

### 30.3 Conclusion

Using SAS, skydivers in any body position can express their vertical speed by a number (SAS). This number remains virtually constant regardless of altitude with little or no variance due to temperature differences and can be compared with the airspeeds of other skydivers.

This means that regardless of the elevation of the DZ you are jumping at, SAS will be the same for the same body position.

SAS is very useful when doing big formation skydiving. If using TAS, it will seem like



the base is slowing down the fall rate during the entire skydive.

***NOTE: Jump data is continuously stored in both TAS and SAS. Stored information may be displayed in either unit of measurement by selecting the respective mode.***

## 31 - Specifications

Dimensions: 64 x 44 x 13 mm (2.52 x 1.73 x 0.51 inches)

LCD Display area: 29 x 31 mm (1.14 x 1.22 inches)

Weight: 37 grams (1.3 oz.)

Battery type: 2 x Renata CR-2325

Battery Life Time: Around 2 years or 300 jumps

### 31.1 Climb to Altitude Alarm Sounds

Calibration range: 0 to 29,900 feet (0 to 9,100 meters)

1<sup>st</sup> warning: Two 0.2 second beeps. Factory preset: ---- (disabled)

2<sup>nd</sup> warning: Two 0.2 second beeps. Factory preset: ---- (disabled)

3<sup>rd</sup> warning: Two 0.2 second beeps. Factory preset: ---- (disabled)

4<sup>th</sup> warning: Two 0.2 second beeps. Factory preset: 1000 ft.

Volume: Factory preset: 7

Pitch: Factory preset: 7

### 31.2 High Speed Alarm Sounds

Calibration range: 0 to 29,900 feet (0 to 9,100 meters)

1<sup>st</sup> warning:

One 1.5 second pulsating alarm if vertical airspeed exceeds 13 m/ sec at preset altitude. Sound sequence: Pulsating, low repetition. Factory preset: ---- (disabled)

2<sup>nd</sup> warning:

One 3 second pulsating alarm if vertical airspeed exceeds 13 m/ sec at preset altitude. Sound sequence: Pulsating, low repetition. Factory preset: 4500 ft.

3<sup>rd</sup> warning:

One 4 second pulsating alarm if vertical airspeed exceeds 13 m/sec at preset altitude. Sound sequence: Pulsating, high repetition. Factory preset: 3000 ft.

4<sup>th</sup> warning:

Siren alarm as long as vertical airspeed exceeds 13 m/sec at or below the preset altitude. After deployment the trigger speed switches to 35 m/sec. Sound sequence:

High pitch continuous siren. Factory preset: 1500 ft.

Volume: Factory preset: 7

Pitch: Factory preset: 7

### 31.3 Low Speed Alarm Sounds

Calibration range: 0 to 29,900 feet (0 to 9,100 meters)

1<sup>st</sup> warning: One 0.2 second beep. Factory preset: ---- (disabled)

2<sup>nd</sup> warning: One 0.2 second beep. Factory preset: 1200 ft.

3<sup>rd</sup> warning: Two 0.2 second beep. Factory preset: 900 ft.

4<sup>th</sup> warning: One 1.3 second beep. Factory preset: 600 ft.

Guide: Factory preset: OFF

Volume: Factory preset: 3

Pitch: Factory preset: 7

### 31.4 Alarm Output Volume

112 +/- 2dB at minimum volume "1" measured at 1 inch (2.54 cm)

117 +/- 2dB at maximum volume "9" measured at 1 inch (2.54 cm)

### 31.5 Alarm Output Pitch

3000 Hz at minimum pitch "1"

4000 Hz at maximum pitch "9"

### 31.6 Altitude Selection Interval

10 feet (10 meters)

### 31.7 Setup Defaults

Altitude Offset: None

AUT / ECO: ECO

Beep ON / OFF: ON

Set Dive Type: None

TAS / SAS: TAS

Feet / Meters: Feet

Celsius / Fahrenheit:

Celsius

MPH / KM/H:

MPH

### 31.8 Logbook

Minimum freefall time for logbook generation in normal mode:

Around 8 seconds.

Minimum freefall time for logbook generation in "3-Sec mode":

Around 3 seconds.

Approximately 200 jumps with two minute profiles

Approximately 26 jumps with 15 minute profiles

Accumulated number of jumps: 29,999

Max. exit altitude: 30,000 feet (9,140 m)

When Divetype set to SLO: Max exit altitude: 39,999 feet (12,191 m)

Max accumulated freefall time: 999 hours

### **31.9 Tolerances**

Exit altitude: +/- 1.2%

Deployment altitude: +/- 1.2%

Freefall time: +/- 1 sec

Speed (TAS/SAS): +/- 3 mph (+/- 5 km/h)

### **31.10 Clock**

Accuracy: +/- 4 min/month

Factory preset values:

Date: 2017-01-01.

Time: 12-00-00.

12-24 Format: 24.

### **31.11 Operating Altitude**

0 to 40,000 feet

### **31.12 Operating Temperature Range**

-20°C to +50°C (-4°F to +122°F)

### **31.13 Storage**

2 MB flash memory

USB Mass Storage Class (MSC) device

### **31.14 USB Connector**

Micro USB Type B

Meets or exceeds EEC/89/336

L&B part no.: 213802.

NATO Stock no.: NSN 6675-22-624-9459.

## 32 - Warranty

The following conditions apply to the PROTRACK II™ warranty:

If within 12 months of the purchase of PROTRACK II™ a defect or damage is identified by faulty manufacture, LB ALTIMETERS will repair the unit at no cost to the end user.

To make a claim under this warranty, send the unit to an authorized dealer or directly to LB ALTIMETERS together with the dated purchase invoice or receipt.

The warranty becomes void if damage is caused by external circumstances or if the unit has been serviced or repaired by third parties unauthorized by our national agents or LB ALTIMETERS.

All further claims, especially for defects after skydiving accidents, are excluded.

LB ALTIMETERS has no obligation to honor any extension of warranty granted by any national agent.

## 33 - Waiver of Liability

The buyer and user of the PROTRACK II indemnify the manufacturer and vendor from any liability for damage incurred before, during and after skydiving with the instrument.

REV | #2.1



**ALTIMETERS**

Manual for Download and Support

**[WWW.LBALTIMETERS.COM](http://WWW.LBALTIMETERS.COM)**